




Fuse Box Location

The fuse box is located within the driver footwell below the boot release latch. Moving the seat back as far it will go will provide easier access. You will need to pull off the cover to access the individual fuses. Make sure the ignition is off then changing fuses.

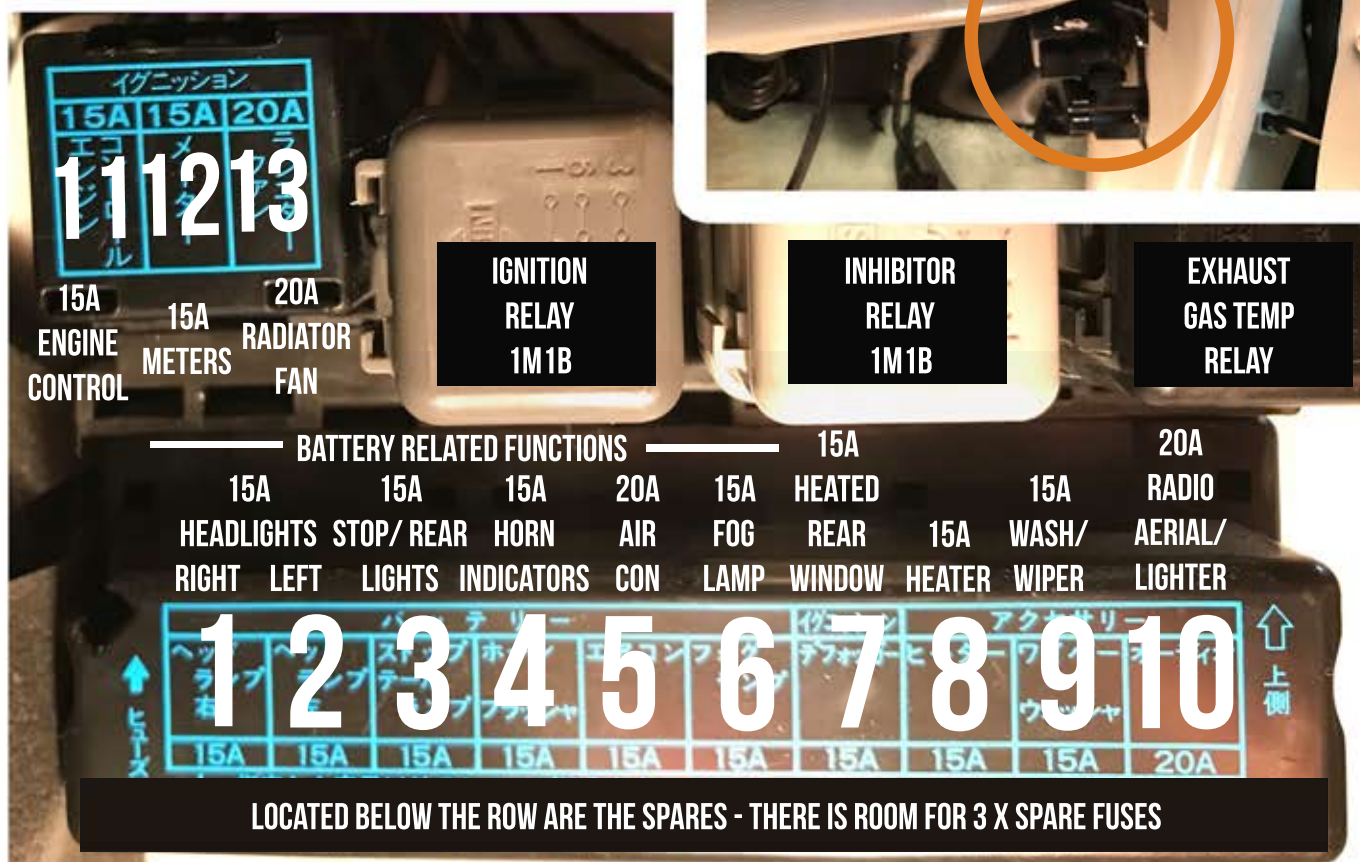

IGNITION		
15A	15A	20A
ENGINE CONTROLS	METERS	RADIATOR FAN



BATTERY FUNCTIONS						IGN	ACCESSORIES		
RIGHT HEADLIGHT	LEFT HEADLIGHT	STOP/REAR LIGHTS	HORN/INDICATORS	AIR CONDITION	FRONT FOG LIGHTS	REAR WINDOW HEATER	HEATER	WASHER/WIPER	RADIO/AXIAL LIGHTER SOCKET
15A	15A	15A	15A	15A	15A	15A	15A	15A	20A

Figaro Owners Club

↑ TOP

APPLY THESE TO THE BOX LIDS

Simply cut out the paper labels and stick to the lids of the fuse boxes.